

PLANNED MAINTENANCE POINTS OF SERVICE

RIDE-ON SCRUBBER SERVICE POINTS

1. CHECK ALL SWITCHES & GAUGES
2. INSPECT ALL WIRING & CONNECTIONS
3. LOAD TEST BATTERIES
4. HYDROMETER TEST BATTERIES / FILL CELLS AS NEEDED
5. CLEAN & TIGHTEN ALL BATTERY CONNECTIONS
6. SPRAY ALL CABLE ENDS WITH PROTECTANT SPRAY
7. CHECK CHARGER PLUGS FOR DAMAGE
8. CHECK CHARGER FOR PROPER OPERATION
9. CHECK VAC MOTORS FOR PROPER OPERATION
10. INSPECT / CLEAN / REPLACE VAC FILTERS
11. CHECK FLOAT ASSEMBLY FOR PROPER OPERATION
12. INSPECT ALL VAC HOSES & DRAIN PLUG
13. CHECK ALL VAC SYSTEM GASKETS & SEALS
14. CHECK TANKS FOR CRACKS OR LEAKS
15. CHECK SOLUTION VALVE(S) FOR PROPER OPERATION
16. INSPECT ALL SOLUTION LINES & CONNECTIONS
17. GREASE ALL ZERK FITTINGS
18. LUBRICATE ALL PIVOT POINTS
19. CHECK & TIGHTEN ALL NUTS / BOLTS
20. INSPECT SQUEEGEE BLADES & CLEAN / ROTATE
21. ADJUST SQUEEGEE ASSEMBLY AS NEEDED
22. CHECK STEERING ASSEMBLY & ADJUST AS NEEDED
23. INSPECT WHEELS FOR WEAR ON TREAD & BEARINGS
24. CHECK BRAKE SYSTEM FOR PROPER OPERATION
25. CHECK EMERGENCY BRAKE FOR PROPER OPERATION
26. INSPECT ALL BELTS & ADJUST
27. INSPECT DRIVE CHAIN / ADJUST / LUBE AS NEEDED
28. CHECK PAD DRIVE MOTOR BEARINGS & MOTOR BRUSHES
29. CHECK ALL SPLASH GUARDS & SKIRTS
30. CHECK ALL PAD DRIVERS & PAD RETAINERS
31. CHECK ALL PHASES OF OPERATION
32. WIPE DOWN ENTIRE UNIT WITH CLEANER

AUTO SCRUBBER SERVICE POINTS

1. CHECK ALL SWITCHES & GAUGES
2. INSPECT ALL WIRING & CONNECTIONS
3. LOAD TEST BATTERIES
4. HYDROMETER TEST BATTERIES / FILL CELLS AS NEEDED
5. CLEAN & TIGHTEN ALL BATTERY CONNECTIONS
6. SPRAY ALL CABLE ENDS WITH PROTECTANT SPRAY
7. CHECK CHARGER PLUGS FOR DAMAGE
8. CHECK CHARGER FOR PROPER OPERATION
9. CHECK VAC MOTORS FOR PROPER OPERATION
10. INSPECT / CLEAN / REPLACE VAC FILTERS
11. CHECK FLOAT ASSEMBLY FOR PROPER OPERATION
12. INSPECT ALL VAC HOSES & DRAIN PLUG
13. CHECK ALL VAC SYSTEM GASKETS & SEALS
14. CHECK TANKS FOR CRACKS OR LEAKS
15. CHECK SOLUTION VALVE(S) FOR PROPER OPERATION
16. INSPECT ALL SOLUTION LINES & CONNECTIONS
17. GREASE ALL ZERK FITTINGS
18. LUBRICATE ALL PIVOT POINTS
19. CHECK & TIGHTEN ALL NUTS / BOLTS
20. INSPECT SQUEEGEE BLADES & CLEAN / ROTATE OR REPLACE
21. ADJUST SQUEEGEE ASSEMBLY AS NEEDED
22. INSPECT WHEELS FOR WEAR ON TREAD & BEARINGS
23. CHECK BRAKE SYSTEM FOR PROPER OPERATION
24. INSPECT ALL BELTS & ADJUST
25. INSPECT DRIVE CHAIN / ADJUST / LUBE AS NEEDED
26. CHECK PAD DRIVE MOTOR BEARINGS & MOTOR BRUSHES
27. CHECK ALL SPLASH GUARDS & SKIRTS
28. CHECK ALL PAD DRIVERS & PAD RETAINERS
29. CHECK ALL PHASES OF OPERATION
30. WIPE DOWN ENTIRE UNIT WITH CLEANER

PROPANE BUFFER SERVICE POINTS

1. CHANGE OIL & FILTER
2. REMOVE ALL SHROUDS & CLEAN COOLING FINS
3. CHECK FOR OIL LEAKS
4. INSPECT / CLEAN AIR FILTER & PRECLEANER
5. INSPECT / CLEAN DEBRIS FILTER
6. CHECK FUEL LINES FOR LEAKS WITH SOAP SOLUTION
7. TORQUE ALL HEAD BOLTS TO MANUFACTURER'S SPEC'S
8. INSPECT SPARK PLUGS / REPLACE AS NEEDED
9. TIGHTEN ALL BOLTS AS NEEDED
10. CHECK & CLEAN BATTERY CONNECTIONS
11. INSPECT & ADJUST DRIVE BELTS / REPLACE AS NEEDED
12. INSPECT BELT TENSIONER & PULLEY
13. CHECK FRONT END ASSEMBLY & LUBE BEARINGS
14. CHECK WHEELS & BEARINGS
15. CHECK / ADJUST / LUBE THROTTLE CABLE
16. CHECK ENGINE RPM AT HIGH SPEED / ADJUST AS NEEDED
17. SET ENGINE RPM TO PROPER SPECIFICATION AT IDLE
18. PERFORM A.C.O. EMISSIONS TEST / RECORD RESULTS
19. CHECK ALL PHASES OF OPERATION
20. WIPE DOWN UNIT WITH CLEANER

RIDE-ON BATTERY BURNISHER SERVICE POINTS

1. CHECK ALL SWITCHES & GAUGES
2. INSPECT ALL WIRING & CONNECTIONS
3. LOAD TEST BATTERIES
4. HYDROMETER TEST BATTERIES / FILL CELLS AS NEEDED
5. CLEAN & TIGHTEN ALL BATTERY CONNECTIONS
6. SPRAY ALL CABLE ENDS WITH PROTECTANT SPRAY
7. CHECK CHARGER PLUGS FOR DAMAGE
8. CHECK CHARGER FOR PROPER OPERATION
9. GREASE ALL ZERK FITTINGS
10. LUBRICATE ALL PIVOT POINTS
11. CHECK & TIGHTEN ALL NUTS / BOLTS
12. INSPECT WHEELS FOR WEAR ON TREAD & BEARINGS
13. CHECK BRAKE SYSTEM FOR PROPER OPERATION
14. CHECK EMERGENCY BRAKE FOR PROPER OPERATION
15. INSPECT ALL BELTS & ADJUST
16. INSPECT DRIVE CHAIN / ADJUST / LUBE AS NEEDED
17. CHECK PAD DRIVE MOTOR BEARINGS & MOTOR BRUSHES
18. INSPECT PAD SHROUD / SKIRT & VAC BAGS
19. CHECK PAD RETAINERS & PAD DISC
20. CHECK FOR PROPER PAD PRESSURE OPERATION
21. CHECK ALL PHASES OF OPERATION
22. WIPE DOWN ENTIRE UNIT WITH CLEANER

BATTERY BURNISHER SERVICE POINTS

1. CHECK ALL SWITCHES & GAUGES
2. INSPECT ALL WIRING & CONNECTIONS
3. LOAD TEST BATTERIES
4. HYDROMETER TEST BATTERIES / FILL CELLS AS NEEDED
5. CLEAN & TIGHTEN ALL BATTERY CONNECTIONS
6. SPRAY ALL CABLE ENDS WITH PROTECTANT SPRAY
7. CHECK CHARGER PLUGS FOR DAMAGE
8. CHECK CHARGER FOR PROPER OPERATION
9. GREASE ALL ZERK FITTINGS
10. LUBRICATE ALL PIVOT POINTS
11. CHECK & TIGHTEN ALL NUTS / BOLTS
12. INSPECT WHEELS FOR WEAR ON TREAD & BEARINGS
13. INSPECT DRIVE CHAIN / ADJUST / LUBE AS NEEDED
14. CHECK PAD DRIVE MOTOR BEARINGS & MOTOR BRUSHES
15. INSPECT PAD, SHROUD, SKIRT & VAC BAGS
16. CHECK PAD RETAINERS & PAD DISC
17. CHECK ALL PHASES OF OPERATION
18. WIPE DOWN ENTIRE UNIT WITH CLEANER

CARPET EXTRACTOR SERVICE POINTS

1. CHECK ALL SWITCHES & GAUGES
2. INSPECT ALL WIRING & CONNECTIONS
3. CHECK VAC MOTORS FOR PROPER OPERATION
4. CHECK PUMP MOTOR CONDITION & OUTPUT
5. INSPECT / CLEAN / REPLACE VAC FILTERS
6. CHECK FLOAT ASSEMBLY FOR PROPER OPERATION
7. INSPECT ALL VAC HOSES & DRAIN VALVE
8. CHECK ALL VAC SYSTEM GASKETS & SEALS
9. CHECK TANKS FOR CRACKS OR LEAKS
10. INSPECT ALL SOLUTION LINES & CONNECTIONS FOR LEAKS
11. INSPECT & LUBE SOLUTION VALVE
12. INSPECT SOLUTION CABLE ASSEMBLY
13. INSPECT WHEELS FOR WEAR ON TREAD & BEARINGS
14. INSPECT ALL BELTS & ADJUST AS NEEDED
15. CHECK BRUSH DRIVE MOTOR FOR PROPER OPERATION
16. INSPECT VAC SHOE / WAND FOR CLOGS OR DAMAGE
17. CHECK VAC SHOE ADJUSTMENT
18. CHECK & CLEAN SPRAY JETS & SPRAY BAR ASSEMBLY
19. CLEAN BRUSH & PULLEY ASSEMBLY
20. CHECK POWER SUPPLY CORD & PLUG END
21. CHECK ALL PHASES OR OPERATION
22. WIPE DOWN ENTIRE UNIT WITH CLEANER

Helping You Reduce Your Total Cost of Cleaning!

THE SURTEC SYSTEM

SERVICE DIRECT 800 877 5050